

Phileas® ONE

Volume & mobility



Autonomous Airborne Surface Disinfection (ASD) device, with unique technique of dry fog using the centrifugation technique. In compliance with the **EN 17-272 norm.**
Marketing Authorisation **N° AMM FR-2019-0071** obtained with the **O2SAFE7.4®** disinfectant.

Technical characteristics

Volume treated: 10 up to 165* m³

Device's flow: 1.2 L/hr

Diffusion time: 30 min for 50 m³ at 12 mL/m³
for example

Droplets size: 5 to 10 µm

Up to 5 consecutive cycles

Liquid safety notification "Liquid inlet error" if the biocide tank is empty

Minimum maintenance, robust device

Biocide tank: 2L

Power: 60W

Size (l x w x h): 302 x 220 x 485 mm

Weight: 8 kg

Material compatible with O2SAFE7.4® & Phileasafe®

EN 17-272 compliant & Marketing Authorisation

Works on mains power

Power supply: 100-240V, 50/60Hz, 1.8A

Indication: final disinfection after cleaning

After-cleaning three-step disinfection



1- Diffusion

Microdrop Phase
Microdrop Technology®**:
the biocide sprayed in non-wetting fog covers the entire surfaces

2- Contact time

Steam Phase

- Small droplet size allows to shorten the evaporation time
- Biocide enters the microbial cells and kills it

3- Aeration

Recovery after
20 air changes

Performance, Safety, Simplicity & Rapidity for the following applications:



Health sector



Food industry




Research laboratories



Veterinary

Phileas® ONE

Volume & mobility

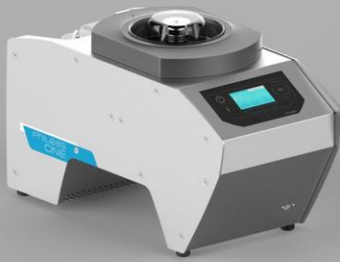

Performance

- Effectiveness confirmed by the **Marketing Authorisation N°FR-2019-0071** and compliant with **EN 17-272**
- 4- \log_{10} , 5- \log_{10} , **6- \log_{10}** microorganism decrease **depending on the requirements**
- Possibility to set **up to 5 successive cycles**
- Light, robust and powerful: **the perfect device for intensive utilisation**
- **Maintenance kit** supply, for reliable disinfection cycle each time

Rapidity

- Adaptation of the protocol according to the **goal** and **disinfection level** to achieve
- Different **zones & programs** memorized (name, volume, biocide dose...) for fast disinfection cycle launch
- **Microdrop Technology®**: dry fog nebulisation technology and optimised contact time

Security

- **Remote monitoring with MyPhileas®**: no contact with the biocide
- **Early notification** if the biocide level is missing
- **Easy and automatic programming system**, reducing the risk of error by users
- **Management of accreditation level**: parameters of the zones can only be modified by the administrator (with a password)
- Compatible with O2SAFE7.4® and Phileasafe®: $\leq 7.4\%$ H_2O_2 concentration, **safe for users and non corrosive for equipment**
- O2SAFE7.4® is 100% biodegradable, additive free and residue free

Control, data analysis & traceability

- **Easy programming and total autonomy** with two criteria: volume & concentration
- **Automatic calculation** of the diffusion time
- Variables and treatment area **memorisation functionality**
- Get a **high traceability level with MyPhileas®** application:
 - Available on **laptop (Android & Windows) or tablet** (can be provided) via Wifi connection
 - **Remote control** during the disinfection cycle
 - **Traceability of the previous diffusion reports** via MyPhileas® application
 - Information of the device's conditions



Why Devea?

- Biodecontamination expertise with the most demanding sectors & Marketing Authorisation
- Devea Services:
 - Protocol support & personalized advices
 - Disinfection service provision
 - Maintenance kit & step by step guided maintenance manual
 - Biological and chemical indicators provision
 - After-sale service & equipment repair diagnostic under 48hrs
- A range of products adapted for all volumes
- Design, manufacture and maintenance in France (Nantes)